


The Saf-T Vent SC Adjustable Section serves as a variable length between other components when specific lengths cannot be utilized. The installed length is 12 1/2" to a maximum of 19 1/2".

Installation Procedure


The Adjustable assembly consists of the female Inner Vent, the male Outer Vent, a packet of self tapping screws, an alcohol pad, and a packet of silicone lubricant.

Step 1: Before assembling, lightly moisten both gaskets in the Outer Vent section with the silicone provided.

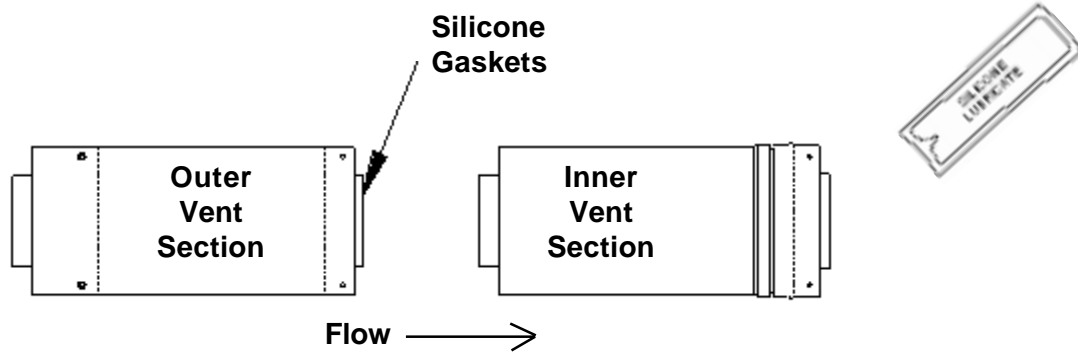

Step 2: Slide the Inner Vent into the Outer Vent to the desired overall length.

Step 3: Connect the 2 sections at the holes in the outer jacket. Use the self tapping screws provided. If using a variable torque drill, use a low torque setting to install the screws, as to not strip out the holes. Do not apply pressure on the drill when installing screws.

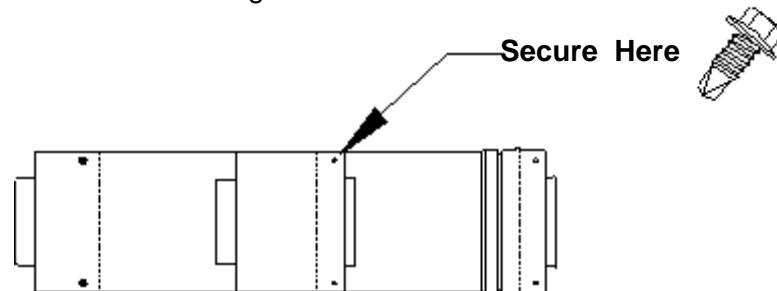

Step 5: Install the completed Adjustable Section per the Assembly instructions in the SC Installation Instructions, PI-SCINS. Use appropriate supports where needed.

